




249 West Main St.
Goshen, NY 10924
800-354-6278
www.shoesystemsplus.com

How to time a 77 or 88 McKay


- Step 1: Line up the two arrows in front of the hand wheel.
- Step 2: Line up the two notches at the base of the horn.
- Step 3: Line up the hole in the whirl with the notch in the horn tip.
- Step 4: Replace the horn tip cover with the two screws.

How to set the needle

With the needle bar at its lowest position set the barb of the needle facing directly to the right and the tip of the needle just below the bottom of the horn tip.

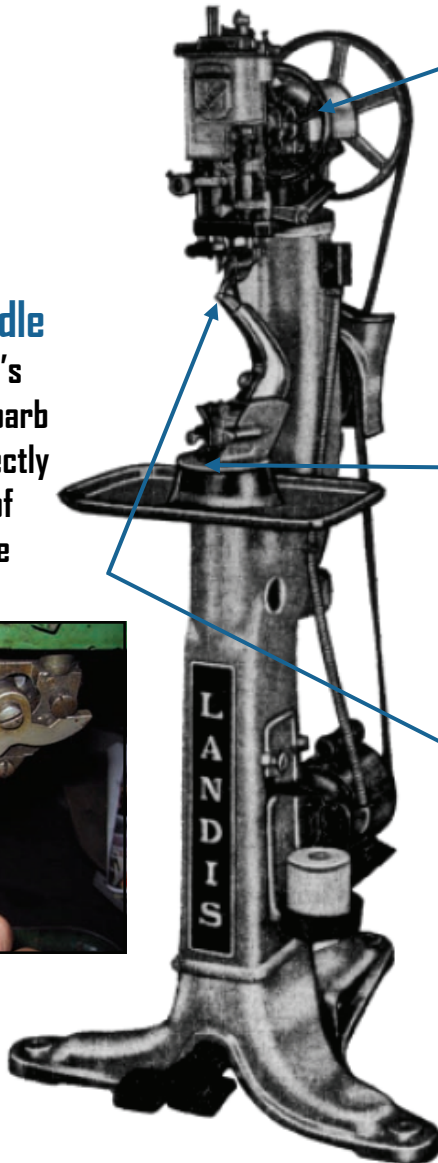

1

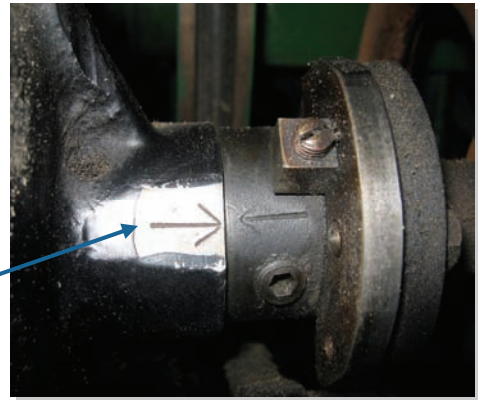

2



3

